

## ASSEMBLY INSTRUCTIONS

- Step ①** Select the site. It must be: -  
 ~ level, sheltered, free of roots, sticks and rocks, well drained  
 Remove the poles from the storage bag and assemble the poles.
- Step ②** Remove the Ensuite from the carry bag and allow it to unfold and open fully. All four walls should be apart and all inside corners open to 90 degrees.
- Step ③** Position the Ensuite so the door faces your desired direction. Peg the four corners out using the webbing loops located at the four external corners; firm but not tight.
- Step ④** The two roof poles have the pre-bent ferrules. These poles run inside the roof from corner to corner. Insert one end into the webbing pocket and carefully flex the pole in an arc and insert the other end into the webbing pocket diagonally opposite. Secure the poles in the centre with the touch tape tab.
- Step ⑤** The three remaining poles are the side brace poles. Slot the spigot end of the pole into the eyelet in the webbing tabs located about half way up each wall on the corner seam. Repeat for other two walls.
- Step ⑥** Attach the four guy lines to the Ensuite and peg them out as far as possible from the Ensuite. The loop formed by using the locking slider should be between 30 and 50 cms long.






**WARNING - The centre hook has a weight limit of 2.5kgs. It is designed to take the shower rose only. The water bladder should be hung from a stand outside the Ensuite.**

## DISSASSEMBLY INSTRUCTIONS

### While the unit is standing upright

- Step ①** Push any corner in towards the opposite corner to reduce four walls to two double panels.
- Step ②** Fold the two double panels together to form one flat tiered structure. Now lay the unit flat on the ground.
- Step ③** While standing with hands about 20cms up each side of the unit, lift the base to your lap. Lift your hands gradually so the unit slumps and bends/curves over about half way down between bottom and top. The top end of the unit should touch the floor. Bring your hands together in front of you so that each side touches. You should notice that coils are already forming in the frame.
- Step ④** While still holding the frame pass your left hand under your right hand to tuck one coiled section inside the other. Your arms will cross.
- Step ⑤** Place unit on the ground and even up the size of the coils so the unit can fit into the bag.
- Step ⑥** Stuff the Ensuite into the carrying bag for storage.

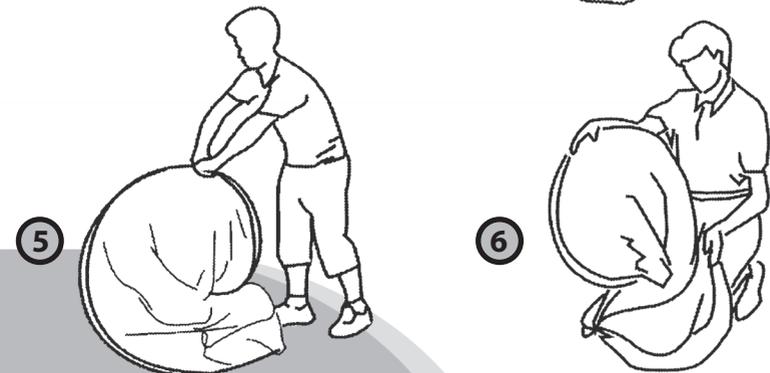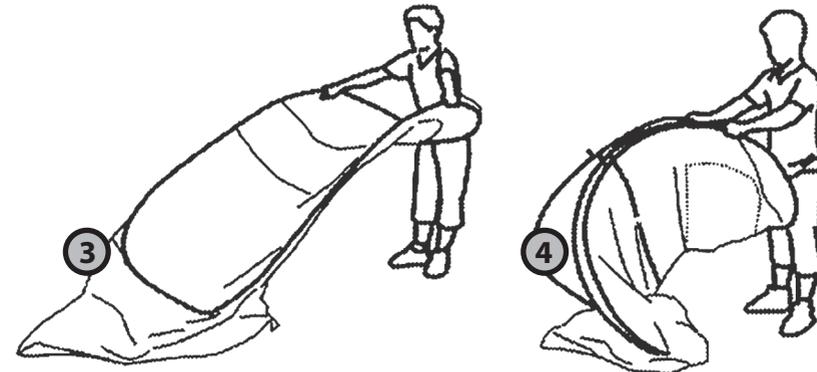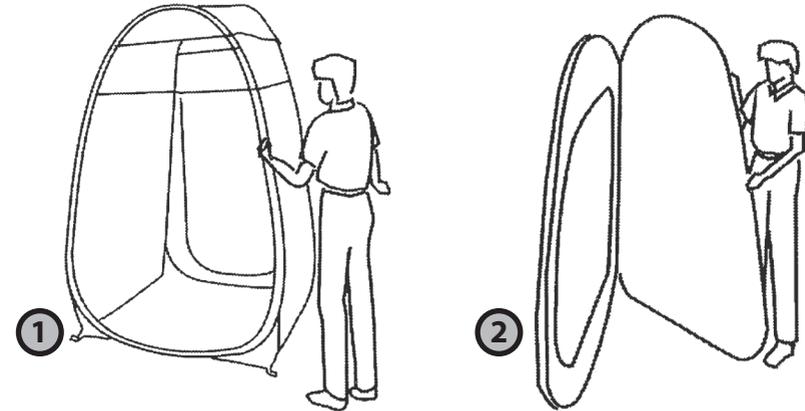

**WARNING - At no stage is it necessary to apply any excessive force to disassemble the Ensuite. The steel frame is sprung loaded and if undue force is applied it can distort. This is deemed abuse and is not covered by our warranty.**